



TracPhone® V11HTS Quick Start Guide




This guide provides basic operation information for the TracPhone V11-HTS. For complete operation, setup, and diagnostics information, refer to the system's comprehensive Help, available on the Support tab of the TracPhone V11-HTS web interface. If you need any assistance, please contact KVH Technical Support.

Technical Support

North/South America, Australia:
Phone: 1 866 701-7103 (U.S. only)
Phone: +1 401 851-3806
Email: mvbsupport@kvh.com

Europe, Middle East, Asia, Africa:
Phone: +45 45 160 180
Email: mvbsupport@kvh.com


Turning On the System

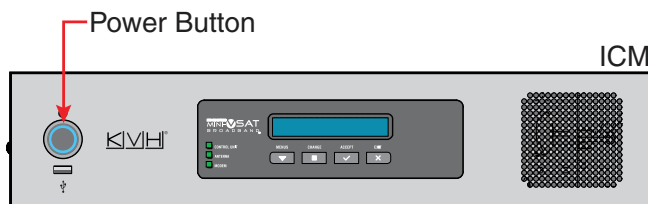

Press the power button on the ICM then wait 5 minutes for system startup. When the ICM indicates "Online," you can make a voice call or access the Internet using any device connected to the network.

The antenna requires a clear view of the sky. Objects such as bridges and boat masts can block satellite signals.

Caution – RF Radiation Hazard

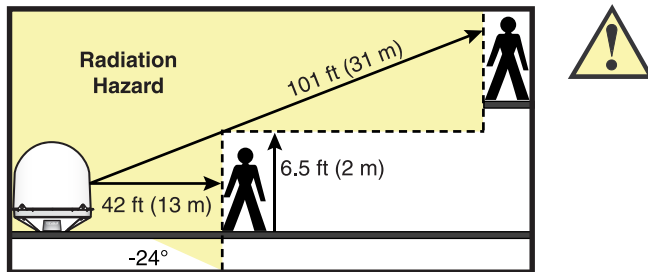

The antenna transmits radio frequency (RF) energy that is potentially harmful. When the system is in use, make sure everyone stays more than 42 feet (13 m) away from the antenna. The minimum safe distance increases to 101 feet (31 m) if a person is more than 6.5 feet (2 m) above the plane of the antenna's base.

You can program up to two no-transmit zones to prevent transmissions and protect people in accessible areas around the antenna. Refer to the Help for details.

Making a Voice Call

FROM the Vessel

How you dial depends on your Line 1 phone number.

To call outside the country assigned to Line 1:
Dial <Int'l Prefix>+<Country>+<Area>+<Phone No.>

To call within the same country as Line 1:
Dial <Area>+<Phone No.>

To call within the same country & area code as Line 1:
Dial <Phone No.>


Int'l Prefix = International call prefix from Line 1 country

TO the Vessel

People on shore call your vessel by dialing one of your vessel's phone numbers. If they call within the same country code as the vessel's phone number, they may avoid international charges. If they call from within the same area code, they may avoid long-distance fees.

For a fee, you can choose the country code and area code of your vessel's phone number(s). You can also add "virtual numbers." For details, call KVH's Satellite Airtime & Product Activation department (*see www.kvh.com/mvbcustomercenter for contact info*).

Accessing the ICM's Web Interface

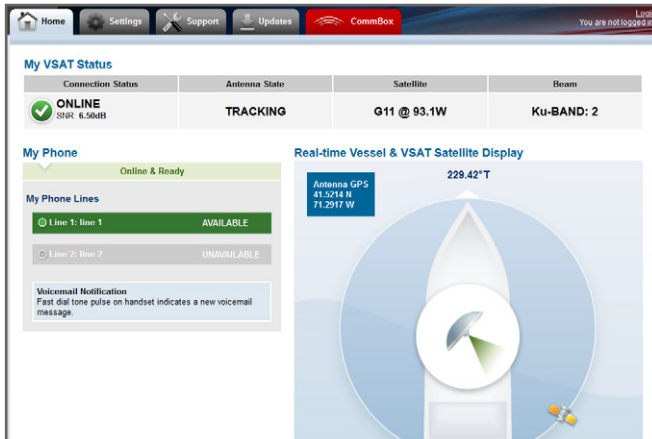


Connect to the vessel's network (the same network to which the ICM is connected). Then start your web browser and enter **http://minivsat.kvh**. If this doesn't work, enter the ICM's IP address (default is 192.168.6.1). You can find this address on the LCD: go to Settings > Network Settings > IP Assignments.

At the web interface, you can check system status, update software, and configure all aspects of the system.

You can also use the mini-VSAT iPhone® app to view system status information and update software. Download the app for FREE from the Apple App Store®.

Accessing the mini-VSAT Manager at myKVH

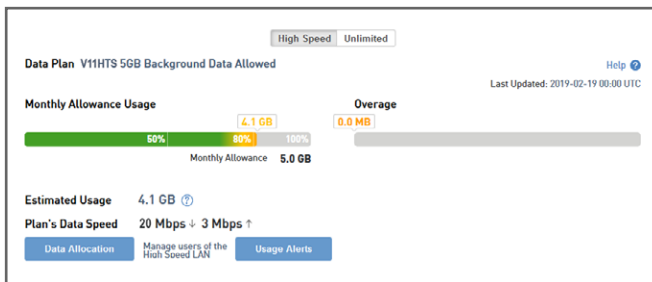

Open a web browser on any device connected to the Internet and enter **www.mykvh.com**. Then log in with the password you created for yourself during activation.

Using the myKVH mini-VSAT Manager, you can check your vessel's data usage, set up usage and overage alerts, restrict certain categories of data, and establish daily, weekly, or monthly data allocations for each user on the vessel. You can also change the system's network settings and view your vessel's track and speed data.

Online Resources

Service Activation & Customer Support
kvh.com/mvbcustomercenter

Coverage Map
kvh.com/minivsatmap

Data Management
mykvh.com