



TracPhone/Iridium Bundle Quick Start

This guide explains how to use the Iridium Pilot® system with your TracPhone® V-IP-series mini-VSAT BroadbandSM system. If you need any assistance, please contact KVH:

KVH Technical Support

North/South America, Australasia:

Phone: 1 866 701-7103 (U.S. only), +1 401 851-3806

Email: mvbsupport@kvh.com

Europe, Middle East, Africa, Asia-Pacific:

Phone: +45 45 160 180

Email: mvbsupport@kvh.com


Install the SIM Card



The SIM card is included in the Welcome Kit. When installed in the Below Decks Equipment (BDE), the SIM card validates the Pilot system at startup, allows connection to the Iridium network, and enables the appropriate phone and data lines.

Refer to the SIM installation instructions provided in the Iridium Pilot User Manual to install the SIM card in the BDE.

Connect the BDE to the ICM

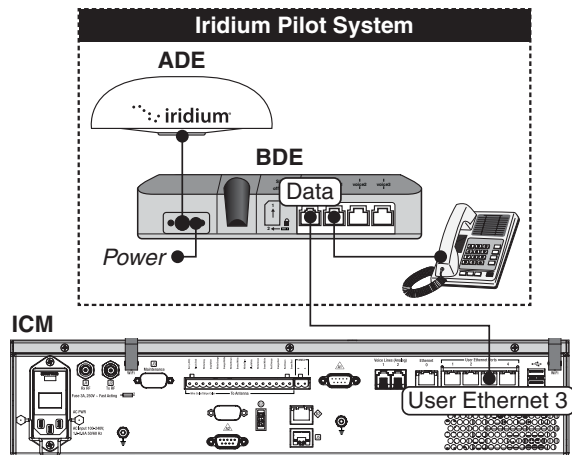


Once the Iridium system is installed, connect an Ethernet cable from the “Data” port on the BDE to the “User Ethernet 3” port on the ICM. In an Iridium configuration, the ICM’s User Ethernet ports are set up as follows:

User Ethernet Port	Usage
1	Vessel LAN (DHCP)
2	Vessel LAN (DHCP)
3	Iridium
4	Reserved for static IP*

* If you wish to establish an optional static IP connection, please fill out the request form at www.kvh.com/staticip.




Warning – RF Radiation Hazard

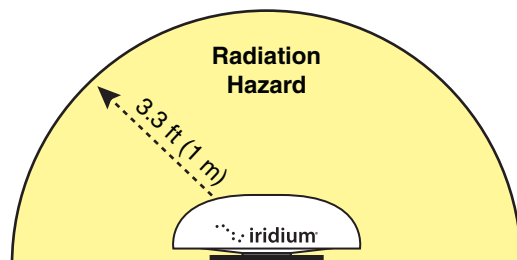

The Iridium Pilot Above Decks Equipment (ADE) transmits RF energy that is potentially lethal. Whenever the system is powered on, make sure everyone stays more than 3.3 feet (1 m) away from the ADE.

Refer to the Iridium Pilot manuals for complete safety information.

Viewing Connection Status Information

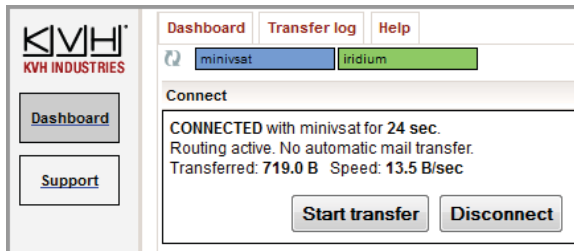

Color	Status
Blue	System currently in use
Green	Ready for use
Yellow	No service connection
Red	System is turned off or miswired

Whenever the mini-VSAT Broadband service is unavailable, the system automatically switches to the Iridium service. You can view the status of both service connections on the CommBox™ web interface:

1. Open your web browser and enter **http://192.168.5.1** to access the TracPhone web interface.
2. On the **CommBox** tab, click **Log in to CommBox Control**.
3. Log into the CommBox web interface.
User name: **commbox**
Password: **password**
4. Color indicators at the top of the dashboard show the general status of each connection. Place your mouse over a connection to view its details.

Important Notes

- Phones connected to the ICM can only make calls via mini-VSAT Broadband. Phones connected to the BDE can only make calls via Iridium.
- You cannot use **http://minivsat.kvh** to access the TracPhone web interface. Use **http://192.168.5.1** instead.
- The system's network settings have been preconfigured at the factory. There are no user-configurable settings on the "Network Settings" page of the TracPhone web interface.