






# TracPhone<sup>®</sup> V30/TracNet<sup>™</sup> H30 AgilePlans<sup>®</sup>











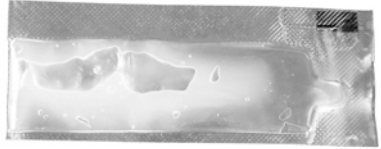
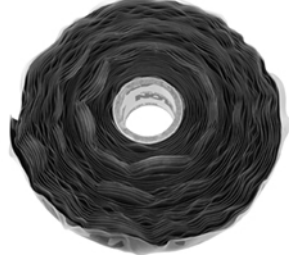
## Kitpack Contents List

(KVH part nos. 72-0929 + 72-0951-xxxx or 72-1020-xxxx)

This kitpack contains various parts that will be needed to complete the installation. Ensure that the kitpack contains all of the items listed in the table below.

Part Name	Part Number	Quantity	Photo	✓
#10-32 x 3/8" screw (extra hardware)	14-0053-03N	3		
1/4" self-locking nut	14-0065-25	4		
1/4" flat washer	14-0132-08	4		
1/4"-20 x 2" hex bolt	14-0250-32	4		
1/4" flat wide washer	14-0251	4		

Part Name	Part Number	Quantity	Photo	✓
Plastic screw cap	19-0088	6		
Diagnostics phone	19-0683	1		
6" tie-wrap	22-0006	10		
Foam seal	24-0142	1		
RJ11 phone cable with ferrite, 25 ft (7.6 m)	32-1153-25	1		
<p>Antenna cable (connectors included – two installed on cable, one loose)* might ship separately</p> <p>‡ Includes pigtail cables, 3 ft (0.9 m): 32-1440-003T (x2)</p>	<p>32-1439-xxxx or 32-1441-xxxx‡ or 32-1453-xxxx</p> <p>xxxx = length in feet</p>	1		

Part Name	Part Number	Quantity	Photo	✓
NMEA 0183 heading cable, 100 ft (30 m)* might ship separately	32-1247-0100	1		
Anti-seize lubricant	60-0138	1		
Silicone grease	60-0146	2		
Self-adhesive tape	70-0047	1		

If any of the contents are missing, please contact KVH Technical Support:

<b>Technical Support</b>
1 866 701-7103 (Continental U.S.A.) +1 401 851-3806 (Worldwide) <a href="mailto:mvbsupport@kvh.com">mvbsupport@kvh.com</a>

**Packed by:**

---